GASTROBACK®

INSTRUCTIONS FOR USE

Art.-Nr. 41311 ELECTRICAL PROFESSIONAL ICE-CRUSHER

ELECTRICAL PROFESSIONAL ICE-CRUSHER

Introduction

Please read all the advice and instructions with care and keep the manual.

The Gastroback electrical Ice-Crusher is used for crushing water icecubes and water icepieces which do not exceed the seize of the deposit slot and fit through the slot without using force. The ice is getting crushed with a crushing gear that runs on a 100 Watt motor.

The Ice-Crusher is easy to handle and is maintenance-free . Clean the appliance after every use regarding to the instructions ´Care and cleaning`.

Gastroback recommends safety first

We at Gastroback are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions. Carefully read all instructions before operating and save for future reference.

Important safeguards

Please read all the advice and instructions with care and keep the manual.

- Only use the appliance as stated and only for thus use. Any non-appropriate use and misusage can cause damages and heavy personal injuries through voltage, fire and moving units.
- Only proceed the appliance as described in the directions.
- Reparation and technical maintenance of the appliance or line cord are just allowed to be accomplished by an authorised specialist reparation shop.
- Do **not** use or store the appliance outdoors.
- Only use units, spare parts and supplies which are provided and recommended by the manufacturer.
- **Never** situate the appliance close to a strong heat source or a hot surface (for example: heater, stove or grill)
- **Never** clean the motor block or parts of the appliance in the dishwasher.
- Make sure the deposit slot is empty and place the ice bucket in the right position before you turn on the power switch (refer to ´Assembling your Gastroback Ice-Crusher`).
  The processed icecubes should not contain any foreign substance.
  After use remove the leftover ice in the deposit slot.
- Always uncoil the line cord completely before installing the appliance.
- Place the appliance close to a power point and connect it directly without using any extension cords to avoid additional risks of injury through fire or voltage.
- Only install the appliance in proper form secure grounding receptacle with adequate electric power supply (alternating current; 220/240 V, 50 Hz) and ground fault circuit interrupter. The maximum power consumption of the appliance is 100 Watt. You should also install a fuse with a release current of maximum 30mA. If necessary ask your electrician for help.

- **Never** pull, rip, bend, clamp, squish or knot the line cord. Pay attention to the line cord not hanging of the table. Attend to nobody getting caught in loops of the line cord or pulling the appliance of the work space.
  When pulling the plug always catch hold of the enclosure of the plug.
- **Never** leave children unsupervised when the appliance or units of the appliance are in reach.
- **Never** let children play with the appliance or units of the appliance. Children and invalid people have to be supervised using the appliance.
- Do **not** use the appliance if it is damaged or units of the appliance are damaged. Do **not** use the appliance if it does not function properly or if it was excessively loaded. The appliance is likely damaged if the appliance or units of the appliance show cracks, exorbitant wearing down, alterations or leaks. It is also likely damaged if the drive wheel of the motorblock moves slowly or water got into the motorblock. Take the appliance for technical maintenance and repair to an authorised specialised reparation shop.
- Only use units, spare parts and supplies which are provided and recommended by the manufacturer. Damaged or improper units may break in use, damage the appliance or cause injury.
- **Never** clean the line cord, the appliance or parts of the appliance in the dishwasher, poor liquids over the appliance or douse or dip it in water or other liquids.
- The appliance is only suitable for indoor use.
- Only use the appliance for the intended purpose. Do **not** use the appliance in moving vehicles or boats. Do **not** use the appliance outdoors.
- The work space has to be easily accessible, solid, even, dry and of sufficient size.
- Do **not** use the appliance in moist and wet areas.
- Do **not** put any cloth or napkins underneath the appliance to avoid endangering by fire and electric shocks.
- **Never** situate the appliance close to the edge of the working area.
- **Never** leave the appliance unattended, when the plug is plugged into the power outlet.
- Always turn the appliance off and pull the plug when the appliance is not in use or when disassembling, moving or cleaning the appliance.
- Make sure that the appliance is turned off before pulling the plug out of the power outlet.
- **Never** put your hands, hair, cloth or other foreign substance into the deposit slot when the plug is in the power outlet. If the crushing gear is blocked or the motor stops moving while the appliance is activated debug the arrow referring to ´Trouble shooting`.
- **Never** hold your face or other body parts over the feed chute when the motor is running because little pieces of ice could be thrown out of the deposit slot.

Know your Gastroback Professional Ice-Crusher

Deposit slot

ATTENTION:
Icecubes must not exceed 30 x 30 x 30 mm in size.

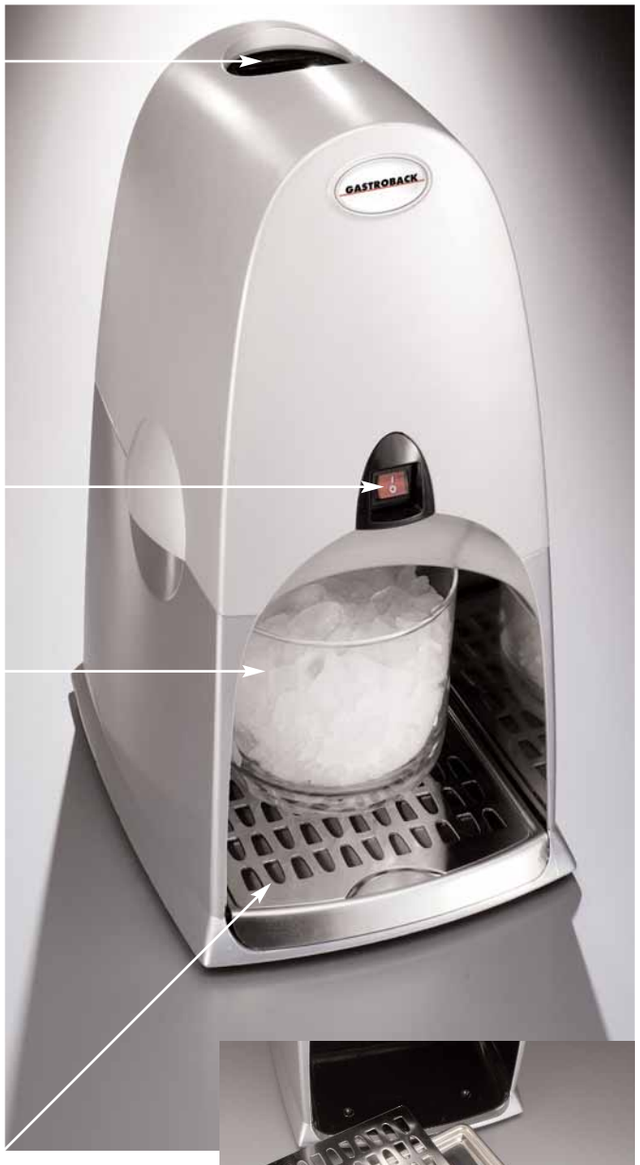

'ON' and 'OFF' switch
ON - I
OFF - 0

Ice bucket

ATTENTION: Stop pouring icecubes into the deposit slot when the ice bucket is almost full of the crushed ice to prevent blocking up the crushing gear. Remove the ice bucket to serve ice and put it back to operate again.

Drip gird and drip tray are made up of stainless steel. They are moveable for cleaning. Take out the drip tray to wash when water or the crushed ice collects on it.

Care and cleaning

Rinse all parts of the appliance before first usage. Operate according to the instructions ´Care and cleaning`.

WARNING – to avoid injuries and damages of the appliance:

- **Never** put your hands, hair, cloth or other foreign substance into the deposit slot when the plug is in the power outlet.
- **Never** clean the line cord, the appliance or parts of the appliance in the dishwasher.

1. Always ensure that the Ice-Crusher is switched off at the power outlet. Then remove the plug from the power outlet before cleaning and storing the appliance.

   Take out the leftover ice of the deposit slot where appropriate. Refer to ´Trouble shooting`. Place the empty ice bucket on the drip tray.

2. When you are using only pure waterice you can move to step 3.

   Before first usage or when using ice with additives clean the deposit slot and the crushing gear carefully with a bottle brush.
   Never clean the appliance or parts of the appliance with abrasive and strong cleaner.
   Parts of the appliance are made of plastic which can warp in hot water and could discolour, get cloudy or scratched using abrasive or strong cleaner. Dip the bottle brush in warm water with a little dishwashing detergent and carefully clean the appliance through the disposal slot. Do not use any force. Rinse the bottle brush with clear water and repeat the procedure.
3. Rinse the deposit slot carefully with a little bit of water.

4. Take out the ice bucket and empty it. Moisten a clean, soft cloth with warm soapy water and wipe the outside of the appliance and of the ice bucket.

5. Dry the appliance and parts of the appliance. Put the ice bucket afterwards back onto the drip tray.

Assembling your Gastroback Ice-Crusher

1. Place the Ice-Crusher on a flat, dry surface such as a bench top and prepare the Ice-Crusher for use.

2. Place the drip grid on the drip tray. Slide the units on the base of the appliance until they are in the right position and finish off with the front of the appliance.

3. Place the ice bucket in the intended space.

4. Put the plug into the power point.

Operating your Gastroback Professional Ice-Crusher

Before first usage: Rinse all parts of the appliance. Operate according to the instructions ´Care and cleaning`.

Operating your Professional Ice-Crusher

While operating the appliance condensed or melt water could build up. Place a dry cloth ready to dry off running down water.

WARNING – To avoid injuries caused by voltage:

Do **not** let any liquids or water run underneath the motorblock and do **not** put any cloth or napkins underneath the appliance to avoid endangering by fire and voltage.

Place the motor base on a flat, dry surface such as a bench top and prepare yourself for usage:

1. Make sure that there is no foreign substance in the deposit slot.
2. Place the ice bucket on the drip tray.
3. Put the plug into the power outlet.
4. Push the 'ON/OFF' button to 'I'.

ATTENTION: Only fill ice into the deposit slot when the motor is operating and do **not** overfill the deposit slot.

5. Start filling the ice into the deposit slot.

Never use force when filling the icecubes into the deposit slot and watch out that no foreign substance gets into the deposit slot.

WARNING: Never hold your face or other body parts over the feed chute when the motor is running because little pieces of ice could be thrown out of the deposit slot.

Never put foreign substance into the deposit slot when the plug is in the power outlet to avoid injuries caused by moving units of the appliance`s crushing gear.

Empty the ice bucket the latest when it is filled up to 3/4.

6. Turn ´Off` the appliance.

7. Take out the ice bucket.

ATTENTION: After 10 minutes of usage turn ´OFF` the motor for 10 minutes to allow the motor to cool down to avoid overheating of the motor.

After usage

8. When you are finished with the crushing of the ice turn ´OFF` the appliance and unplug the plug.

9. Empty the ice bucket and the deposit slot.

WARNING: If needed follow to the instructions ´Trouble shooting`.

10. Clean and dry the appliance according to the instructions ´Care and cleaning`.

Storage

Always clean and dry the appliance before storing. Place the ice bucket into the drip tray. Operate according to the instructions ´Care and cleaning`. Please store the juicer in a frost-free, clean and dry location where it is out of reach of children

Trouble shooting

When overloading the deposit slot or the icecubes get filled into the deposit slot while the motor is not running, the crushing gear can blockup or the motor stops moving while appliance is activated. Operate according to following instructions:

1. Turn ´OFF` the appliance immediately and pull the plug out of the power outlet.
2. Remove the leftover ice out of the deposit slot. Operate according to following instructions:

WARNING – To avoid injuries:

Never put your hands, hair, cloth or other foreign substance into the deposit slot when the plug is in the power point. Take out the ice bucket. Turn the appliance over a bucket or the sink to empty it.

ATTENTION: While turning over the appliance pay attention that no water will run into the downside of the Ice-Crusher.

If needed dry the appliance before turning it over. Joggle the icecubes carefully out of the deposit slot.

3. Place the Ice-Crusher upright on the bench top, dry if needed and place the ice bucket onto the drip tray.
4. Plug the plug into the power outlet and turn the appliance ´ON`.

The motor should be running again. Otherwise please take the appliance for repair to an authorised specialised reparation shop.

Waste disposal

The appliance has to be deposed by the definition of the regional waste disposal of electricalscrap.

If necessary get information of the regional waste management enterprise.

Warranty

We guarantee that all our products are free of defects at the time of purchase.

Any demonstrable manufacturing or material defects will be to the exclusion of any further claim and within 2 years after purchasing the appliance free of charge repaired or substituted.

There is no warranty claim of the purchaser if the damage or defect of the appliance is caused by inappropriate treatment, over loading or installation mistakes.

The warranty claim expires if there is any technical interference of a third party without an written agreement.

The purchaser has to present the sales slip in assertion-of-claims and has to bear all charges of costs and risk of the transport.

GASTROBACK GmbH
Gewerbestraße 29
D-21279 Hollenstedt/Germany

http://www.gastroback.de
E-Mail: info@gastroback.de